




HOW TO USE

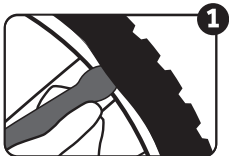

Deflate tube and use levers to remove tube from tire and wheel.

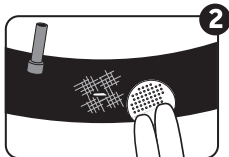

Scuff tube hole area, wipe clean and dry.

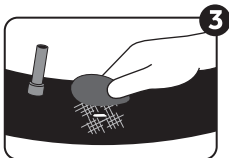

Peel off back of patch, stick patch over hole and press hard to smooth out wrinkles.



Reassemble tire, air up and go.